

SUBHOI CY-27 TECHNOTES

Elevon Mount



Savage Light Industries 19041 Singingwood Circle • Trabuco Canyon • CA • 92679

19041 Singingwood Circle • Trabuco Canyon • CA • 92679 949-589-7120 • Info@SavageLight.com • www.SavageLight.com Copyright © 2009 • All Rights Reserved

Savage Light Industries SUBHOL CY-27 TECH NOTES

Elevon Mount

We discovered that a recent batch of aluminum elevon pivot bearing tubes were longer than what is called for in the kit.

This document contains information about how to cut the pivot tubes if the tubes supplied in your kit are too long.



Photo 1

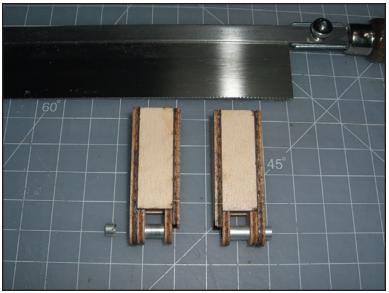


Photo 2

☐☐ 1. Carefully insert the aluminum pivot bearing tube into the assembled elevon mount. Repeat for the other side. (Photo 1)

□ □ 2. Push the tube so it is flush with the inside face of the elevon mount. Use a razor saw to carefully trim the excess tube. Use a hobby blade to ream the inside of the bearing tube to remove any burrs. Make sure the elevon pivot rod rotates freely inside the bearing tube. Repeat for the other side (Photo 2)